




RSR CUP CARBON FIBER FRONT BUMPER AIR DUCTS INTAKES FOR 1994-1998 PORSCHE 993 911



Prior to installation, please verify that all listed parts are present. Should anything be missing, please contact us promptly.

READ BEFORE INSTALLATION

The responsibility for using any Asphalt Killerz product lies entirely with the end user. Asphalt Killerz disclaims any liability for warranty voids or damages that may arise from the use of these products. It is essential to thoroughly examine any area before drilling, as the placement of wiring harnesses and other components can differ significantly. All Asphalt Killerz products are designed exclusively for off-road applications and should be installed by a certified automotive technician.

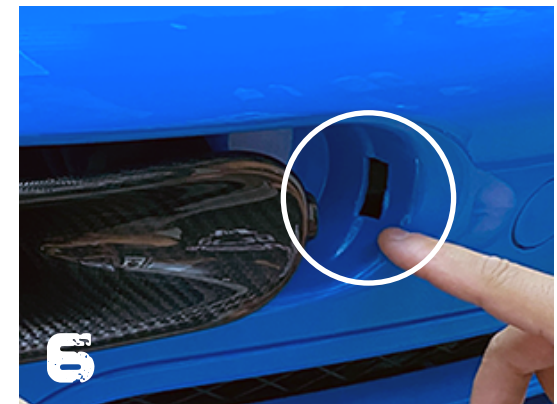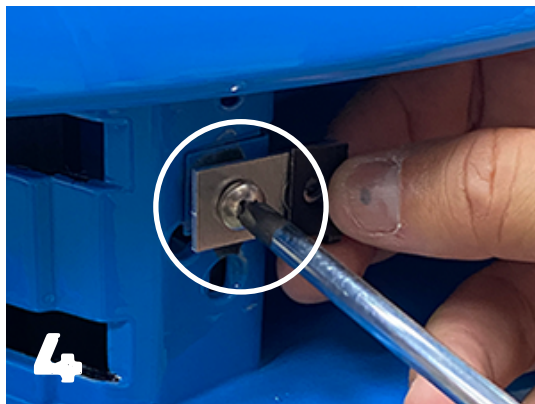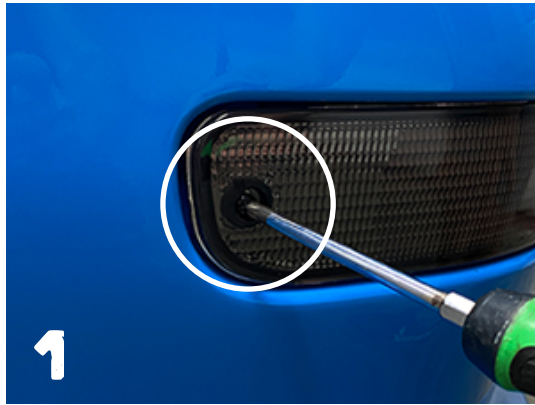

Step 1 - Remove the bolt that secures the turn signal.

Step 2 - Gently take out the turn signal and detach the bulb socket.

Step 3 - If fog lights are not present, simply take out the insert.

If fog lights are present - disconnect them and safeguard the connectors. You may also cut the wiring, but ensure to protect and secure the exposed wires.

Step 4 - Attach the supplied mounting plate using the Clip-On nut.


Step 5 - Avoid tightening it completely.

Step 6 - Insert the air duct into the existing hole in the front bumper.

RSR CUP CARBON FIBER FRONT BUMPER AIR DUCTS INTAKES FOR 1994-1998 PORSCHE 993 911



Prior to installation, please verify that all listed parts are present. Should anything be missing, please contact us promptly.

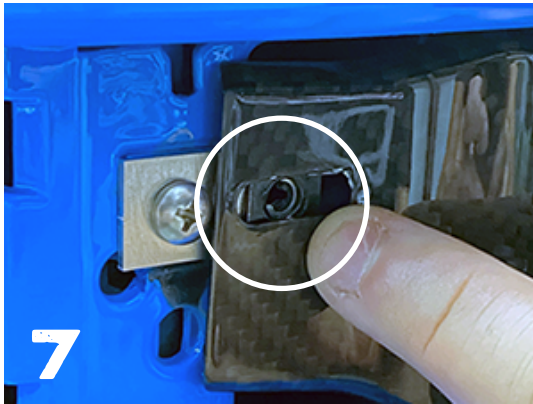

Step 7 - Align the opposite side of the air duct with the hole in the mounting plate.

Step 8 - Securely tighten both screws.

Step 9 - Reconnect the bulb socket to the turn signal and reinstall it.

Step 10 - Check both turn signals to ensure they function correctly.

Step 11 - Enjoy your RSR Cup Carbon Fiber Front Bumper Air Ducts Intakes.