


RSR / CUP HEATER FAN DELETE KIT 964





Prior to installation, please verify that all listed parts are present. Should anything be missing, please contact us promptly.

PERFORATED
BLOCK-OFF PLATE

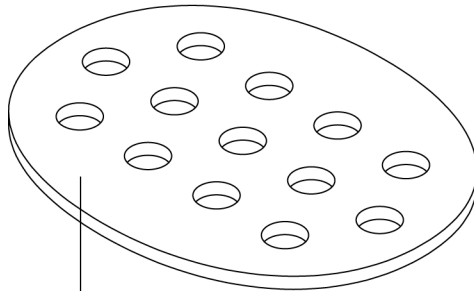

HEAT DUCT
BLOCK-OFF PLATE

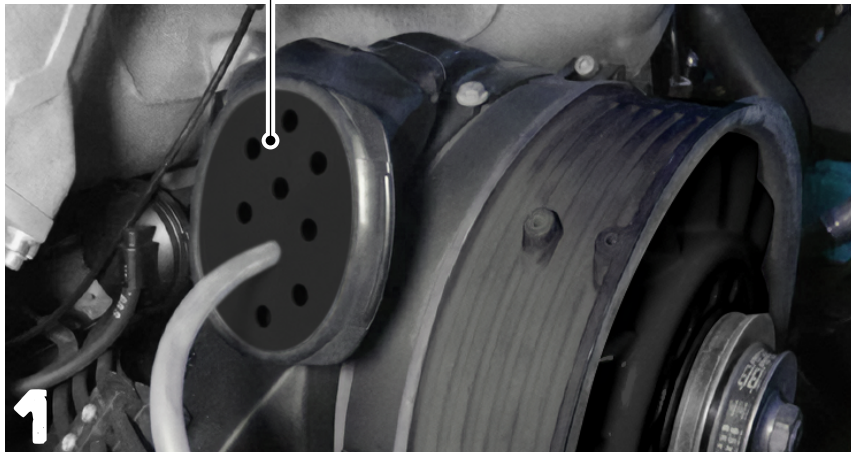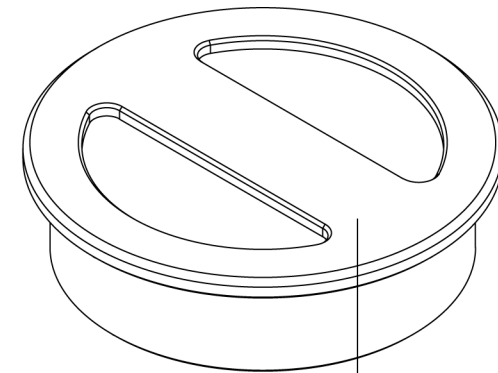

Step 1 - Take out the fan and duct work from the engine compartment.

Step 2 - Place the perforated fan block-off plate into the rubber fan housing as illustrated in Photo 1.

Step 3 - If your vehicle had a rubber vent line connected to the fan housing, insert the tube into the perforated plate as depicted.

Step 4 - Insert the duct plug into the lower duct opening and fasten it with the factory clamp as shown in Photo 2.

Step 5 - With the provided zip ties, bundle and secure any wires or sensors that were previously connected to the blower assembly and are no longer in use.