




KEY BEZEL FOR PORSCHE 911 964 / 993 OUTLAW BACKDATE RESTO-MOD INSTALLATION

READ BEFORE INSTALLATION

The responsibility for using any Asphalt Killerz product lies entirely with the end user. Asphalt Killerz disclaims any liability for warranty voids or damages that may arise from the use of these products. It is essential to thoroughly examine any area before drilling, as the placement of wiring harnesses and other components can differ significantly. All Asphalt Killerz products are designed exclusively for off-road applications and should be installed by a certified automotive technician.

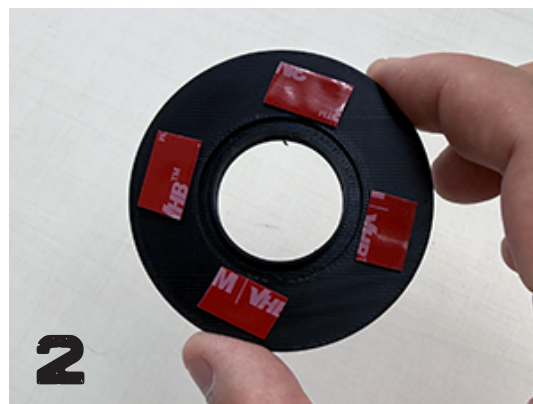

Method 1 - Recommended for Stock Vinyl (not pictured but it is the same procedure)

- Step 1** - Unscrew and remove the OEM bezel.
- Step 2** - Align the aluminum bezel with the “OFF” position at 12 o’clock.
- Step 3** - Secure in place using **clear silicone adhesive**.
- Step 4** - Use **blue painter’s tape** to hold the bezel while the silicone fully cures.
- Step 5** - Enjoy your perfectly aligned bezel.

Optional: If you prefer no **1 mm gap** between the plastic bezel and the aluminum bezel, **use clear silicone adhesive** instead of the 3M tape. Secure with **blue painter’s tape** until the silicone has fully cured.

Method 2 – Recommended for Alcantara or Aftermarket Materials

- Step 1** - Unscrew and remove the OEM bezel.
- Step 2 & 3** - Install the **included plastic bezel**, tightening lightly (do not overtighten).
- Step 4** - Remove the backing from the **3M tape** and align the aluminum bezel with the “OFF” position at 12 o’clock, adhering it to the plastic bezel.
- Step 5** - Enjoy your perfectly aligned bezel.

asphaltkillerz.com

